

ORCA® STOCK SPEC

MODEL NO. TT559001


INSTRUCTION MANUAL VERSION 1.0

Thank you for choosing ORCA Products. Welcome to the power and convenience of Brushless RC. By purchasing the TT559001 Competition Brushless Electronic TOTEM Speed Control ("ESC") you have chosen one of the most advanced electronic controls in RC Racing. This TT559001 ESC is designed for multiple programmable parameters and is the most difficult to familiarize yourself with the installation, setup and operation. By operating this product, you accept the ORCA Warranty Terms.

SPECIFICATION

- System: Brushless
- Forward/Brake/Reverse: Yes (Factory preset at Forward/Brake)
- Dimensions: 25.8(L) x 33.6(W) x 17.6mm(H)
- Weight: 23.5g (excluding wires)
- Voltage Input: 6V-8.7V
- Peak Current: 380A
- Continuous current: 100A
- Motor Type: Sensored 540 sized brushless motors
- B.E.C.: 4A, 4V/7V
- Multi Protection System: Yes

INSTALLATION & CONNECTORS

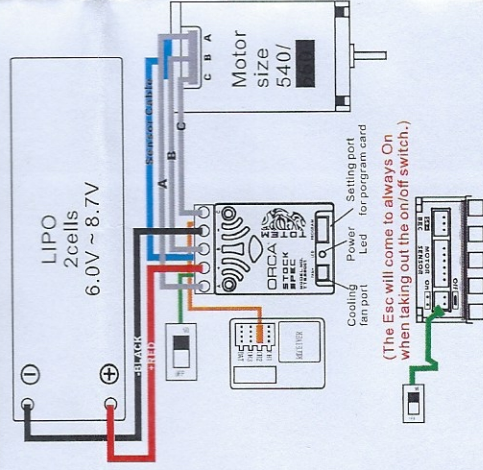

- * Install/Solder the relevant battery connector (Battery Specific) to the battery wires. Red to +ve and black to -ve. (The ESC has no respond when reverse the +ve and -ve)
- * Connect supplied BEC wire (200mm) to 3pin port match the (+ - +) between the receiver connector and ESC.
- * Connect the 3 motor wires to the motor; you can either solder the wires directly to the motor or use your favorite connectors. Match the label of the ESC Output (A, B, C) to the Tablabels on the motor when soldering. Avoid soldering each joint for longer than 5 seconds. Prior to operation make sure you have not created a short by either creating a wire bridge or solder bridge on the motor tabs on the motor. (WARNING! Improper wiring may damage the ESC and void the warranty.)
- * Connect the sensor cable between the ESC sensor plug and the Motor sensor plug.
- * Connect the receiver plug to the CH2/throttle pin of the receiver.
- * The Fan port voltage is drawn directly from the battery.
- * (WARNING! Improper configuration may damage the ESC.)

RADIO & ESC SETUP

- Transmitter Settings:**
- Throttle Travel Maximum / 100%
 - Brake Travel Maximum / 100%
 - Throttle Exponential Start with 0%
 - Throttle Reverse
 - Throttle Servo Reverse (Futaba, KO, Sainwa)
 - Initial set-up of the throttle end-points of the ESC:
 - * Connect the power wires of the ESC to a fully charged battery set; making sure the polarity is correct.
 - * Bind your receiver and transmitter first if your radio requires you to do so.
 - * Turn on ESC and listen for 2 beeps.
 - * After you hear the 2 beeps, apply full throttle and listen for another 2 beeps.
 - * Once you hear the 2 beeps, release the throttle to neutral position.
 - * A beep will then sound, signifying that the ESC endpoints have been successfully set.
 - * If you do not hear the beeping sound as described above, try reversing the throttle reverse setting in the transmitter.

CUSTOMIZING THE ESC

Due to the different requirements of each style and class of racing, it is important to customize your own ESC in each case. Customization of the ESC is done using the Program Card (Sold Separately).



To begin, connect the battery wires to a charged battery, then connect supplied 4pin wire (200mm) to the ESC setting port (4pin port) and Program Card. Turn on the ESC and the Program Card will activate automatically. The ESC will then display the current setup in the ESC to the Program Card. Once loading is completed, the screen will show "ORCA TOTEM" and "1, Program". You can now begin programming your ESC. Press "Enter" to access Program Mode.

TIPS! Whenever in doubt, double check your ESC setting by initializing the Program Card again and checking each menu setting. Navigation around the Program Menu is done using the 4 buttons on the right hand side of the Program Card. The function of each button varies depending on which screen the display is showing.

- Press and hold "SELECT" button two second ----- go to next select
- "A" button - Scroll up
- "B" button - Scroll down
- "Enter" button - Send Changes from Program Card to the ESC and overwrite old data in the ESC

NOTE! The Program Card is not included and is sold separately. The Program Card will compare the Parameters within the card and ESC before sending. If changes are detected, you will hear a series of beeps and the Program Card will display:



TIPS! Do not worry about making mistakes. You will not damage the ESC during setting. If in doubt, you can always reload the default set up and start over again.



OPERATION

Getting started
Turn on the on/off switch, the screen will display:



Use "A" button and "B" button to find (Program). (Data Record) or (Update). Press "SELECT" button to choose. Each mode presented are independent from each other and will require setup.

Press "SELECT" button for 2 seconds to go back to the previous screen.

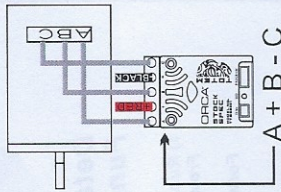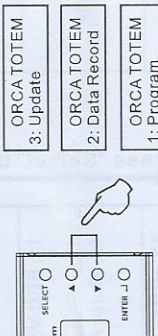


A+B-C must match the initial setup or match your programming setup. (WARNING! Improper configuration may damage the ESC.)

1. Program
Enter direct go to setup page,

Use "SELECT" button go to next setup item
"2: Battery/CutOff" or "3: Punch or 4-10.

2. Data Record

Existing: Battery voltage

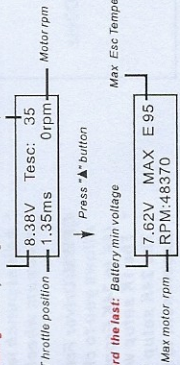

Double press "Enter" button to clear the data, otherwise Min and Max data will keep Forever.

3. Update

Updating of ESC Firmware:

- * Scroll to the "Update" menu and press "Enter". This will show the current ESC Firmware Version.
 - * Press "Enter" again to access the SD cards FIRMWARE folder. Select the firmware that you would like to use to update the ESC. Press "Enter" again and the update will commence (It will take around 1 minute to complete the update).
- Updating of Program Card Firmware:
* Press and hold the Program Card "Enter" button while turning on the ESC. It will display the current ESC Firmware Version.

Version that you would like to use to update the Program Card. Press "Enter" again and the update will commence (It will take around 1 minute to complete the update).

Preparing the SD card for use:

Format a micro SD card using FAT32 file structure using a personal computer. If you are using a Micro SD card larger than 32GB, you will need to use a 3rd party SW Package to do this. Create a new folder called "FIRMWARE" in the root of the micro SD card. Once completed, install the MicroSD card into the MicroSD card slot of the Program Card. Both the Program Card and ESC Firmware Files need to be copied to the "Firmware" Folder. A maximum of 10 of each ESC/Program card firmware can be present in the folder at any one time.

OPERATING TIPS

Multi Protection System -- In addition to the Low Voltage and Overheat Protection that were described above, the ESC is protected in 2 more ways.

- * ESC auto temperature protect.
- * This esc will auto down power to 50% when the esc temperature over: 125F degree

Motor Lock Protection:

* The motor have not temperature protection in this esc, but the ESC is protected against damage when the motor is stuck and does not turn at all. Power will not be applied in this situation.
* CAUTION! Since the ESC relies on the feed back of the 3 motor wires to do its programming, if the motor is stuck, the ESC will not be able to do its job as a result, the ESC will consider the motor to be operational and the power to the motor will not be cut off.

Fail Signal Protection:

* In case the radio signal to the ESC is interrupted for over 1 second during a run, the ESC will cut off until the signal resumes.

Misc. Tips:

- * Connect the ESC to the battery pack only when you are ready to run. This will avoid draining the battery pack. Always disconnect the battery after your run.
- * A small spark may occur when the battery is initially connected to the ESC. This is normal and is due to the charging of the capacitors.

All ORCA products are manufactured in accordance with the highest quality standards. ORCA guarantees this product to be free from defects in materials or workmanship for 60 days from the original date of purchase verified by sales receipt. This limited warranty does not cover damages resulting from abnormal wear, misuse or improper maintenance of the product.

To avoid unnecessary service and mailing charges, always eliminate all other possibilities and check all components for malfunctions before sending in your product for repair. Products sent in for repair that operate perfectly will be charge a service fee.
When sending in the product, always pack carefully and include the original sales receipt, a description of the problem encountered, your return address and contact information. Since we do not have control over the installation and use of this product, we cannot accept any liability for any damages resulting from the usage of this product. Therefore, using this product is at your own risk, and the user accepts all resulting liability from installing and using of the product.

Copyright © 2022 ORCA - All Rights Reserved. Images may not be used without permission.

Setting by Program Card

PROGRAM
A + B - C
C + B - A

↓ Press "Enter" button ↓

	Forward/Brake	Forward/Brake
1. Running Mode	Forward/Rev	Forward/Brake
2. Battery Cut Off	For/Brake/Rev	
	Lipo Low 2.9V	
Middle 3.2V	Middle
High 3.4V	
	Disabled	
3. Punch	1-5	5
4. PWM	1000	
	4000	
	8000	8000
	12000	
	16000	
5. Drag Brake	24000	
	Off	
	5%	
	10%	
	20%	Off
6. Max Brake Force	50%	
	100%	
	off	
	20%	
	40%	100%
7. Brake Punch	60%	
	80%	
	100%	
	1-5	5
	400Hz	
8. Brake PWM	600Hz	
	800Hz	
	1000Hz	1000Hz
	2000Hz	
	4000Hz	

Press "Select" button to next function

Press "Select" button to next function

9. Reverse Force	25%	
	50%	50%
	75%	
	100%	
10. Neutral Range	3%	
	6%	
	9%	6%
	12%	
	15%	
11. BEC Voltage	6V	6V
	7V	
12. Motor Action	CCW	CCW
	CW	Disabled
13. RPM Limit	Disabled	17500Rpm/2polo
	17500Rpm/2polo	

- 5) Drag Brake
Set the automatic brake force applied when the throttle returns to neutral position (6 steps from Off to 100%):
* 50% and 100% Drag Brake recommend used in Crawl only.
- 6) Max Brake Force
Control the Maximum Brake power when you full braking
- 7) Brake Punch
When you set Punch 5, the brake time will follow your throttle brake simple and direct, if you used Punch 1-4 the brake feeling have something ABS, get more smooth.
- 8) Brake PWM (Brake Freq)
Brake PWM operates similar to PWM except it affects the braking instead of the throttle (6 steps from 400hz to 4khz)
* At 400 Hz, the Drag brake and the Brake force will feel the punchiest.
* At 4k Hz, the Drag brake and the Brake will feel smooth.
- 9) Max Reverse Force
Control the Maximum Reverse power when you Reverse the car.
- 10) Neutral Range
Set the sensitive relay to your throttle feeling, normally set in "6%".
- 11) BEC Voltage
Set the voltage 6V or 7V supply for the receiver, this is relay to your serval action feeling, normally set in "6V".
- 12) Motor Action
Set the motor rotate direction, normally set in "CCW".
- 13) RPM Limit
This function will limit your motor RPM maximum up to 17500rpm when use the 2 polar motor, normally set in "Disabled".

Detailed Explanation of each Function items:

- 1) Running Mode
Forward/Brake----- This function the car will not have reverse function, Just forward and brake.
Forward/Rev----- This function the car will reverse immediately when the throttle brake the car.
Forward/Brk/Rev--- Set this function the first touch of throttle brake the car will have brake function, and if you release to centre position after brake and continue brake again the reverse function will appear.
- 2) Battery Cut off Voltage
Lipo Low-----Lipo cut off at 2.9V/cell
Lipo Middle-----Lipo cut off at 3.2V/cell
Lipo High-----Lipo cut off at 3.4V/cell
- 3) Punch
Allows you to change the punch of the ESC (Level 1 to Level 5):
* Level 1 has the least punch and Level 5 has the highest punch.
* Adjust punch level to maximize acceleration speed with minimum wheel spin.
- 4) PWM (Driver Freq)
Allows you to change the forward drive frequency of the ESC (1K to 24K From six step)
* The 1K setup will give you good punch at the low end.
* The 24K setup will result in strong mid to top end.
* Experiment to find out what suits your driving style best.